 




via sash stay




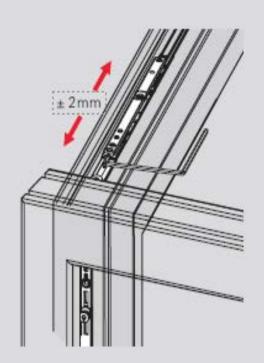

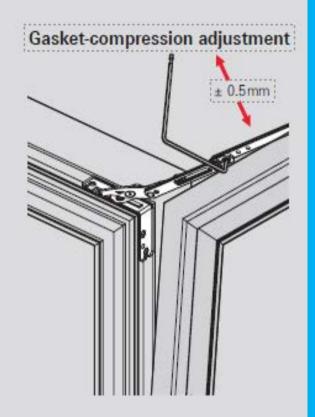


via pivot rest / corner hinge

Height adjustment

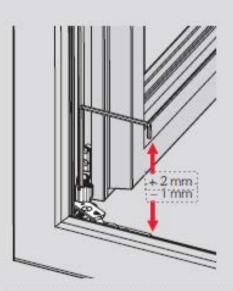

After the height adjustment, the load transfer device has to be readjusted (refer to page 51). Lateral adjustment

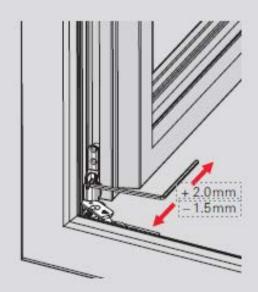

Gasket-compression adjustment

