
-165-

Sills must be flashed from this point

-Flashing:

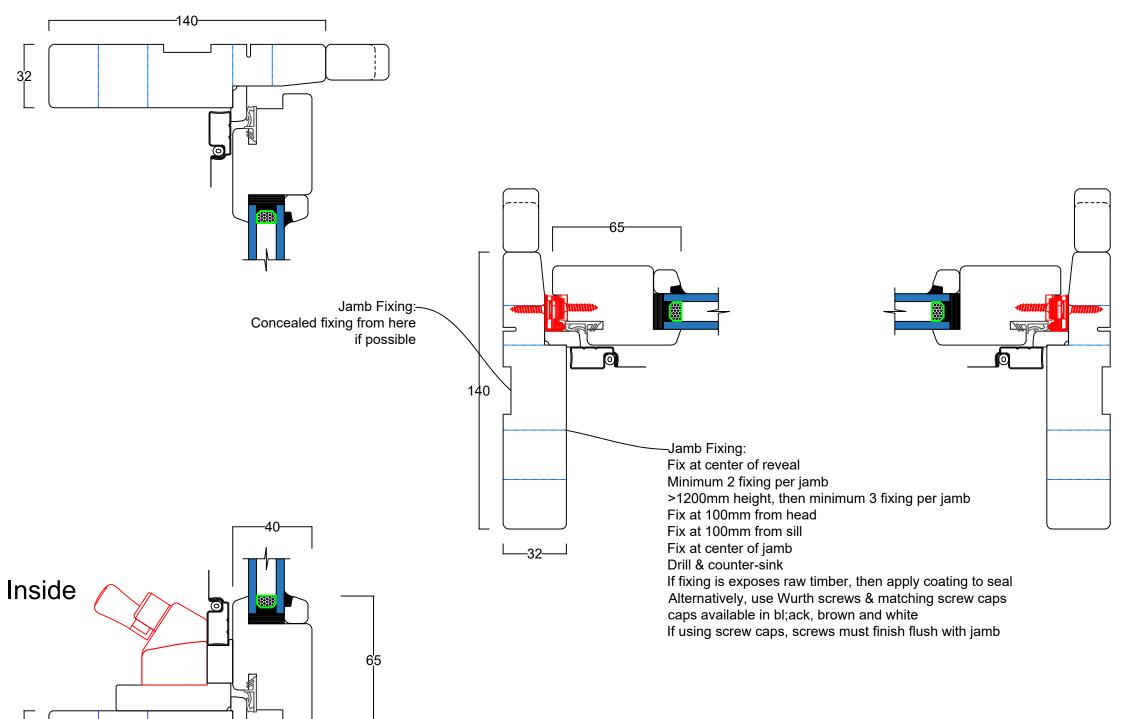

General Notes:

- The information provided here are guidelines only. Always adhere to Australian standards / BCA
- The installation and correct operation of these units in the installed situation is the responsibility of the installer. This includes but not limited to the correct flashing of doors and windows.
- Screw fixings must be used, DO NOT use nails
- The installed units must be plumb, square and level to a laser level. DO NOT use a conventional spirit level
- Check for smooth operation
- Check for even an even gap between sash and jamb
- Sash stays are adjustable. Adjust sash if required
- Check all gaskets are seated correctly



Awning Window				
PART NO. VARIOUS	PROJECT		BINQ	
DRAWN BY/DATE AG 22/03/2019	REFERENCE		World Standard	
WATERIAL VARIES		SCALE @ A3	www.binq.com.au	REV
FINISH/TREATMENT	.X ± 0.1 .XX ± 0.01 ± 0.25°	WEIGHT 1	THIS DRAWING IS THE PROPERTY OF BINQ. Information contained herein is confidential and is not to be used or disclosed to third parties without the written consent of bing SHEET 1 / 1	A
			·	